

INSTALLATION INSTRUCTIONS

880TP/TP-BE (see other side for 880DT/EO/NL)

- **1.** Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
- **2.** Prepare door for trim:
 - **A.** Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
 - **B.** Locate and prepare all holes as shown.


IMPORTANT

Note that trim center line is offset from line X-X by 1/8" as shown.

3. For TP trim, install cylinder in trim. Cut cylinder tailpiece to extend out of exit device side of door as follows:

44 Rim device: 3/16" to 1/4" extension 88 Rim device: 5/8" to 3/4" extension

- **4.** Cut thumbpiece to extend 5/8" to 3/4" out of exit device side of door.
- 5. Apply trim.
- 6. Apply exit device.

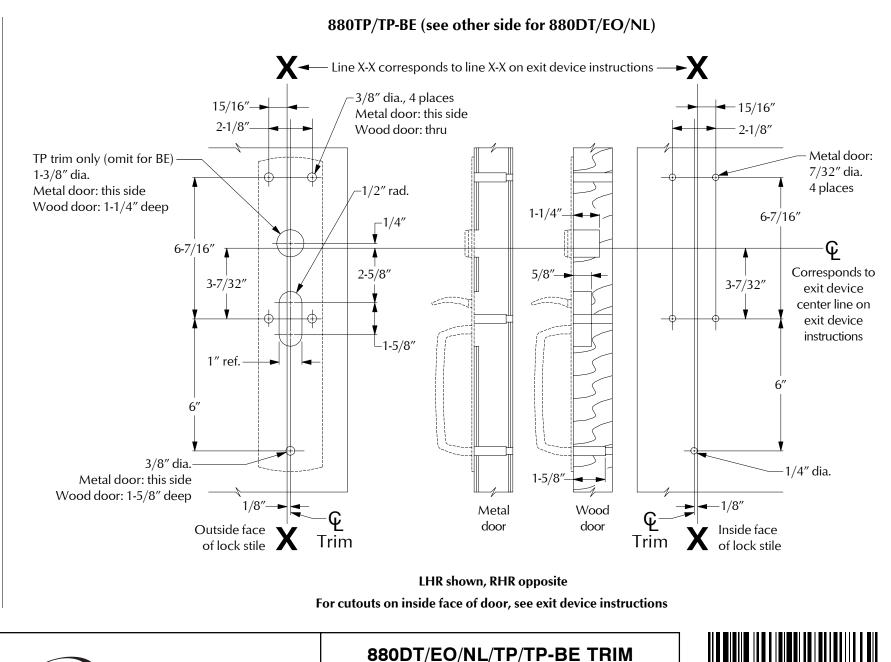

Company Limited



| 880DT/EO/NL/TP/T FOR 44 AND 88 RIM | | | |
|---------------------------------------|----------|----------|--|
| Copyright © 2007 Ingersoll-Rand | PAGE NO. | REVISION | |

7

921250-00

1 of 2

VON DUPRIN.

INSTALLATION INSTRUCTIONS


880DT/EO/NL (see other side for 880TP/TP-BE)

- **1.** Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
- 2. Prepare door for trim:
 - **A.** Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
 - **B.** Locate and prepare all holes as shown.

IMPORTANT

Note that trim center line is offset from line X-X by 1/8" as shown.

- **3.** For NL trim, install cylinder in trim. Cut cylinder tailpiece to extend 5/8" to 3/4" out of exit device side of door.
- 4. Apply trim.
- 5. Apply exit device.

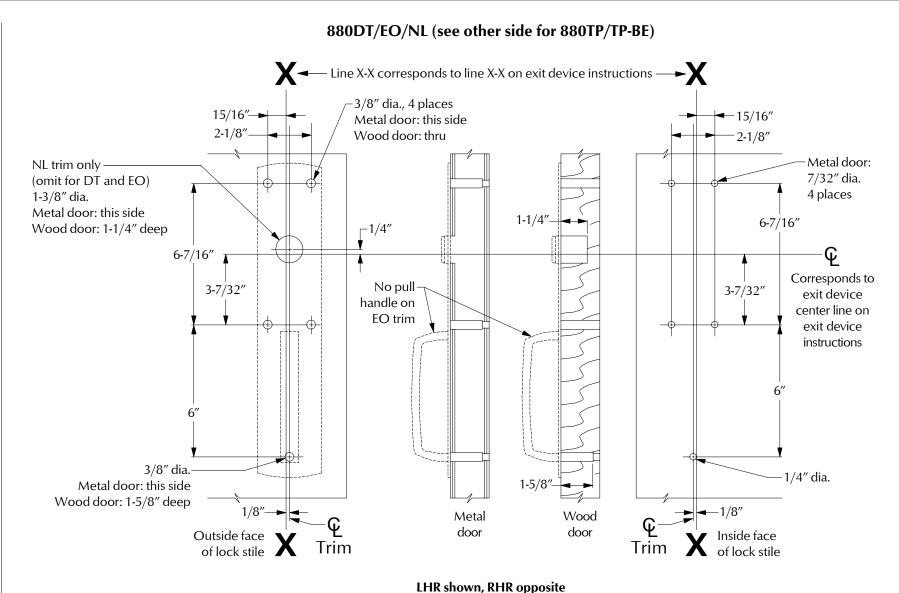

For cutouts on inside face of door, see exit device instructions



| 880DT/EO/NL/TP/1 FOR 44 AND 88 RIM | | | |
|---------------------------------------|----------|----------|-----|
| Copyright © 2007 Ingersoll-Rand | PAGE NO. | REVISION | |
| Company Limited | 2 of 2 | 7 | 921 |

921250-00