


**HANDRAIL BRACKET**

FOR USE ON STAIRWAYS REQUIRING HANDRAILS. EASY INSTALLATION PROVIDES IMMEDIATE SAFETY.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Stud finder, Phillips screwdriver, drill, 1/8" and 5/32" drill bits, pencil

1. Draw a line parallel to staircase at height of 30".
2. Locate studs in wall and install brackets in vertical position equally spaced using 5/32" drill bit. Mark and drill pilot holes with 1/8" drill bit in handrail.
3. Secure rail clamps to bottom side of rail as illustrated.

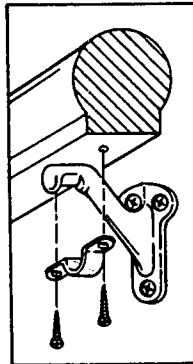

**MAINTENANCE INSTRUCTIONS**

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

**ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES**



**WINDOW LOCKS**



**DOOR STOPS**



**COAT & HAT HOOKS**



**DOOR BOLTS**



0 44074 20667 8

CO59B3 HANDRAIL BRACKET BRASS

MADE IN U.S.A.