


**WINDOW LOCK**

FOR USE ON DOUBLE HUNG WINDOWS TO PROVIDE WEATHERTIGHT FASTENING AND SECURITY.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Phillips screwdriver, pencil and awl.

1. Position hook side of window lock (A) on center of bottom rail of upper window, mark and secure.
2. Position cam lever side of window lock (B) on top center rail of lower window to align with hook side of window lock (A). Check for proper alignment, mark and secure.

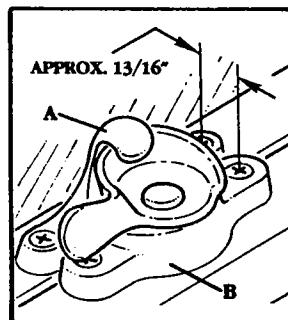


**MAINTENANCE INSTRUCTIONS**

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



WINDOW LOCK C07 MB3 BRT