


## FLOOR DOOR STOP

FOR USE ON FLOOR TO PREVENT DAMAGE TO WALL OR DOOR.

### INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 3/16" drill bit, adjustable wrench and pencil.

1. Locate stop in desired position on floor so door knob doesn't come in contact with wall.
2. Position, mark and drill.
3. Cover stop with cloth to protect finish. Screw stop securely to floor with adjustable wrench.

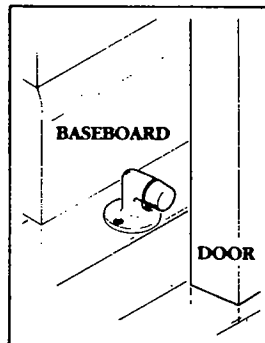

### MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



WINDOW  
LOCKS



DOOR  
STOPS



COAT &  
HAT HOOKS



DOOR  
BOLTS



FLOOR DOOR STOP C430 MB3 BRT

MADE IN U.S.A.