


NuTone®

INSTALLATION INSTRUCTIONS FOR SURFACE MOUNTED CABINETS

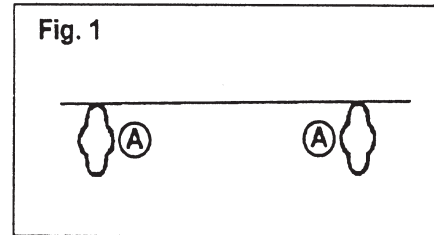

This Bath Cabinet is designed for:

- Surface mounted installation with cabinet being reversible
1. Determine location of cabinet on wall and mark wall through upper mounting holes. (Fig. 1) Generally, the accepted height of a mirrored bath cabinet is 64" from the floor to the center of the mirror area. Shorter or taller families may want to adjust this to a more comfortable height.
 2. Draw a horizontal line connecting these two marks (Fig. 1). This line must be level and, if necessary, should be adjusted by using a carpenter's level..
 3. Drill mounting holes into studs. Insert screws (provided) until 1/8" projects from wall. If studs are not available, use 3/16" molly bolts or 3/16" wall anchors (not provided), depending upon wall material.
 4. Hang cabinet on screws through keyholes (A), drill bottom mounting holds. In screws or molly bolts and tighten all screws securely.

NOTES:

Irregularities in wall surface may cause distortion of the surface mounted cabinet body and may require "shims" to be placed between cabinet and wall.