

# INSTALLATION INSTRUCTIONS

# **IMPORTANT**

Before assembling your ACCESS LIGHTING fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.


**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.


### **GENERAL INFORMATION**

All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to a standard  $4" \times 2 \ 1/2"$ metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.

## STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

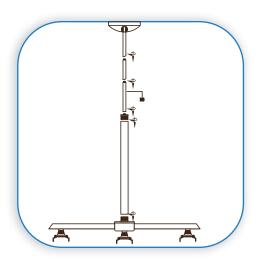

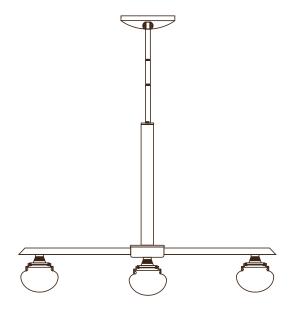

COLLECTION

**APPLICATION** 

MODEL NO.

CLASSIC

Pendant Fixture

62477LEDD

#### WHAT WE PROVIDE

- Mounting Hardware
- Crossbar Plate
- Allen wrench
- 7 x Glass shade
- LED

## WHAT YOU NEED

- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified
   by Electrical Code





If there is an existing fixture remove it.


Tighten 3pcs rods to the canopy and centre rod of fixture.

Expose the supply wires from the outlet box.

CERTIFICATION: UL DRY NO. 62477LEDD

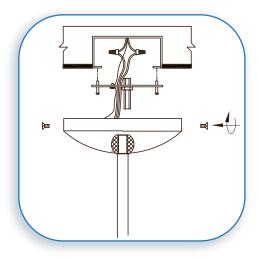

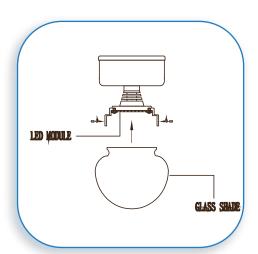

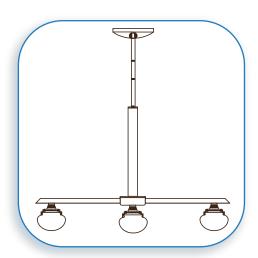

# **MAKE WIRE CONNECTIONS**

Gently pull the supply wires through the hole in the crossbar. Connect the black supply wire to the black fixture wire. Secure with the supplied wire nuts.

Connect the white supply wire to the white fixture wire. Secure with the supplied wire nuts. Either wrap the green wire around one of the protruding screws or connect it to the supply ground wire.

Secure all wires with electrical tape (not supplied).

Tuck all wires carefully into the J-Box.

Align the side holes of the canopy and secure with the supplied screws.

3

# **INSTALL THE GLASS SHADES**

Install the glass shades over the LED module and secure with the suppled allen screws.

WARNING: DO NOT RESTORE ELECTRICITY
AND USE THIS FIXTURE BEFORE THE GLASS
SHADE IS INSTALLED

4

RESTORE THE ELECTRICITY AND
CHECK THE OPERATION OF YOUR
NEW ACCESS LIGHTING FIXTURE

